

**CoCo<sup>®</sup>**  
**BT2-Z**

*Your Constant Companion*



*Please refer to this manual  
before using the product.V1.0*

## Support:

### Step-by-step Tutorial:

[https://youtu.be/tsJLL2Op\\_U0](https://youtu.be/tsJLL2Op_U0)

### Email:

[support@semcorel.com](mailto:support@semcorel.com)

### Phone:

+1 - (669) 221-5768  
(M-F, 9:00AM - 5:00 PM PST)

## 01. How to wear

Please wear the device correctly on your wrist, about half an inch or a finger width from your wrist bone, and adjust it to a comfortable position.

The following pictures are for reference.

Tip: When monitoring your heart rate, wear your device more snugly.



## 02. How to download & connect to “CoCo” App

a. Press and hold the Rotary button to turn on your CoCo BT2-Z, then scroll down from the wallpaper and go to Settings -> About -> Download QR

Code". Scan the QR code displayed on the watch to download and install the "CoCo" App on your smartphone.

Alternatively, you can scan the QR code below to download and install the "CoCo" App.




b. Open the "CoCo" App on your phone, and sign up for a CoCo ID.

The login screen features the CoCo logo at the top. Below it, there are input fields for "US+1" (with a dropdown arrow) and "Enter Phone Number", followed by "Password" and "Enter Password". There are links for "Login by E-mail" and "Forgot Password?". A large blue "Log in" button is centered. At the bottom, it says "Don't have a CoCo ID? Sign up".


The sign-up screen shows the time 12:02 and signal/battery status. It has a "Sign up" header. The main heading is "Welcome to join CoCo!". There are input fields for "First Name", "Last Name", "US+88" (with a dropdown arrow) and "Phone number", and an "Email" field. A note says "Please fill in your Mobile Phone and Email, we will send you the temporal password." Below is a dropdown for "I am currently client of" with "Please select" as the placeholder. There are two checkboxes: "Keep me updated about CoCo products, news and promotions." (checked) and "I agree to the semcoral's Software License Agreement" (unchecked). A large blue "Create a CoCo ID" button is at the bottom.

Then, log in and click on "Settings".  
(The Settings button is at the lower right of the initial app display shown below.)

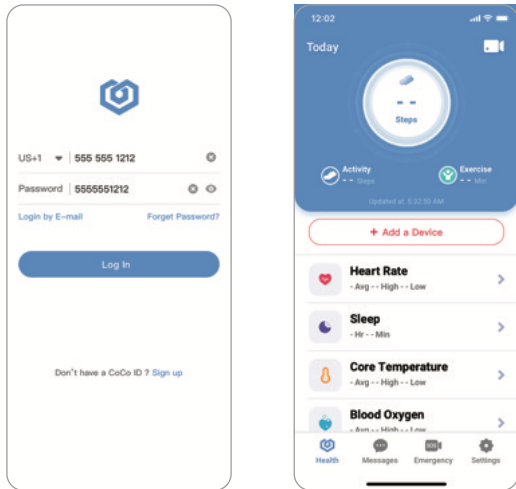


04.

On the "Add Device" page, select "CoCo BT2-Z" and click the "Connect" button.

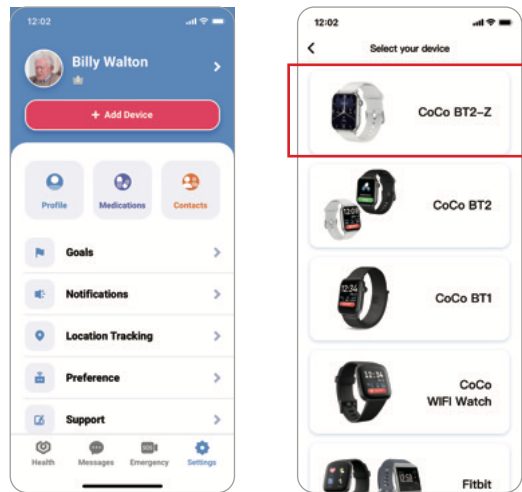

05.


The connection screen will look as follows, and when finished, should return to the first screen with the connected device displayed.

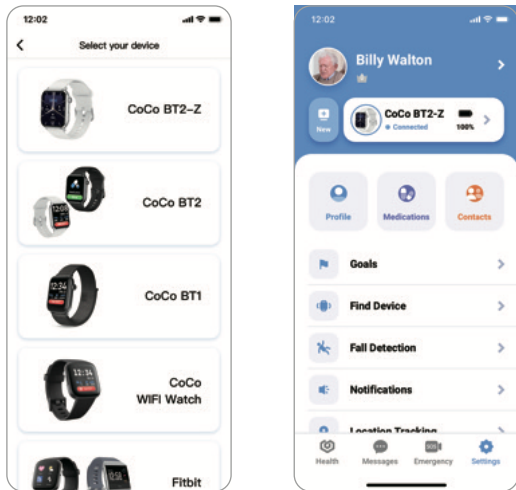

06.

### 03. How to connect to BT call feature

- For Android phones and iOS phones (iOS 13.0 or above), after CoCo BT2-Z is connected to “CoCo” App, a 'PAIR' reminder pop-up will appear.
- For other phones, after CoCo BT2-Z is connected to the “CoCo” App, you need to manually go to settings, search for the audio Bluetooth name 'CoCo BT2-Z (ZID-xxxx)', and click to pair the audio Bluetooth 'CoCo BT2 (ZID-xxxx)'.

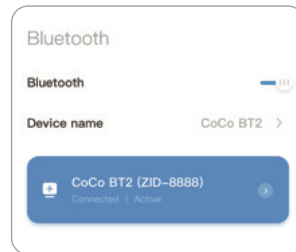

07.

Tips:

1). For a better experience, please always make sure to upgrade the "CoCo" App to the newest version.

2). Make sure your phone's system version is Android 5.0 or IOS 9.0 or above.

3). When connecting for the first time with iPhone, a "Pair" request will pop up. Only click "Pair" and enable the feature in the notification menu to have incoming calls and instant messages pushed.

4). When connecting for the first time with Android, a "Permissions" request will pop up. Please follow the instructions and allow all permissions to ensure all functions work properly.

5). To connect successfully, please turn on your

08.

phone's Bluetooth, GPS, and WiFi.

6). If your CoCo BT2-Z cannot be searched or connected to the "CoCo" App, please turn off or reset your CoCo BT2-Z and try again.


## 04. Operating Instructions

a. Shortcut settings interface: Swipe down from the main screen (below left) to go to the shortcut settings page (right)



09.

b. Message notification: Swipe up from the main screen to check your received messages.

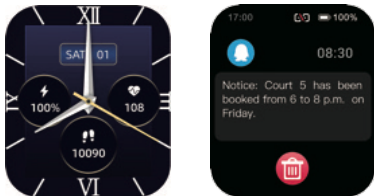


c. To open menus, swipe right to enter the themed list interface.

There are three menu styles available. You can switch between these styles (list, nine-square grid, and honeycomb) in the Settings->Theme menu.



d. To open the status shortcut interface: swipe left from the main screen.

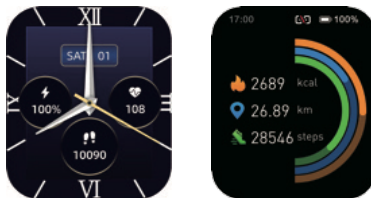


e. For quick access to changing the watch face, press and hold on the main screen for 3 seconds to select the watch display style. Swipe left and right to switch

between watch display styles.



f. To power on/off the CoCo BT2-Z, press and hold the Rotary button for 3 seconds on the watch face interface. The following screen will appear to confirm that you wish to power down the watch:

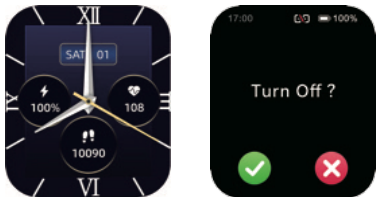

12.

g. During operation, press the Rotary button to return to the previous page. When on the main page, you can press the side button to turn the screen on/off.

h. Rotary button function: You can rotate the button by sliding up and down to switch the list theme on the main screen. On other pages, rotate the button to scroll through the menu. On the honeycomb theme page, rotate the button to zoom in or out.

i. Hold the side button to trigger an ECT call. On the main page, press the side button to access the sports list.



13.



## 05. Function of Activities

	<h3>Training</h3> <p>Support 109 sports modes: walking, outdoor running, cycling, skipping, badminton, etc. More detailed information analysis and data records can be viewed in the “CoCo” App on your smartphone.</p>
	<h3>Status</h3> <p>Record the number of steps, distance, and calories for the day. More detailed analysis and records can be viewed in the “CoCo” App on your smartphone.</p>

14.

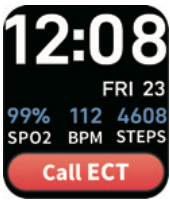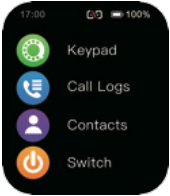	<h3>Call ECT</h3> <p>(Emergency Care Team): You can add ECT members in the "CoCo" App on your smart-phone.</p>
	<h3>Phone</h3> <p>Keypad: You can input a phone number to make a phone call. Call logs: Logs synced from your phone Contacts: Contacts synced from your phone BT Switch: Bluetooth switch for Phone call and Media Control.</p>

15.



### Measure your heart rate

CoCo BT2-Z can record and display your heart rate throughout the day. It offers real-time heart rate monitoring, and the “CoCo” App records your average heart rate over every 10 minutes. During an ECT call, the heart rate is displayed in real-time (note that this value is for reference only and cannot be used as a medical diagnosis).



### Sleep monitor

Record and display the total duration of deep sleep and light sleep. CoCo BT2-Z can record and display the total duration of your deep sleep and light sleep



throughout the night. This feature allows you to track your sleep patterns and improve your sleep quality over time.



### Blood oxygen monitor

Measures your blood oxygen levels and monitors and saves data every ten minutes. (Please note that the values are for reference only and can not be used for medical purposes).



### Weather


Shows the weather forecast for the current day, and the next 4 days

The weather forecast information is updated from the “CoCo” App on your smartphone.



### Music control

After connecting to the “CoCo” App, the CoCo BT2-Z can be used to control music playback from your smartphone, including play/pause, previous song/next song, and volume.

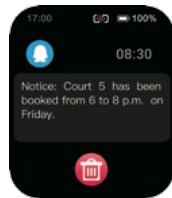

### Information reminder

the CoCo BT2-Z can synchronize notifications from your smart-phone, and display the latest eight messages. (Enable notifications in the “CoCo” App on your smart- phone to support this feature.)



### Alarm clock

You can sync the alarm clock settings with the “CoCo” App. turn on or off the alarm clock setting, and set up to 8 alarm times




## Emotions

Test your current mood.  
The “CoCo” App can record and display your emotional state 24 hours a day.  
(The results are for reference only and should not be used for medical diagnosis.)



## Pressure

24 hours Monitor pressure conditions, record data and display scientific analysis charts, and auto-matic monitoring can be turned on in “CoCo” App.  
(The display is for reference only and should not be used for medical diagnosis.)

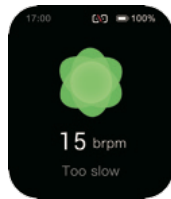



## Respiration Rate



Measures the rate of breaths per minute.  
(The display is for reference only and should not be used for medical diagnosis.)



## Breathing training


You can set the rhythm and duration of the breathing exercises, and then follow the prompts to complete the training.

	<p><b>Games</b></p> <p>Example games include, Numbers Klotski</p>
	<p><b>AI voice assistant</b></p> <p>Press the AI voice function button and say the wake-up words to activate the CoCo voice assistant.</p>

	<p><b>Other functions</b></p> <p>Stopwatch/ Timer / Find phone / Flashlight.</p>
	<p><b>Setting</b></p> <p>Dial/ Theme/ Bright/ Screen time/ Sounds/ IPS/ Reset/ Info/ QR Code/ Password (Not all settings shown.)</p>

## 06. Emergency Help

Press the side button for 3 seconds to trigger calling ECT (Emergency Care Team), or click the “Call ECT” icon from BT2-Z main screen.

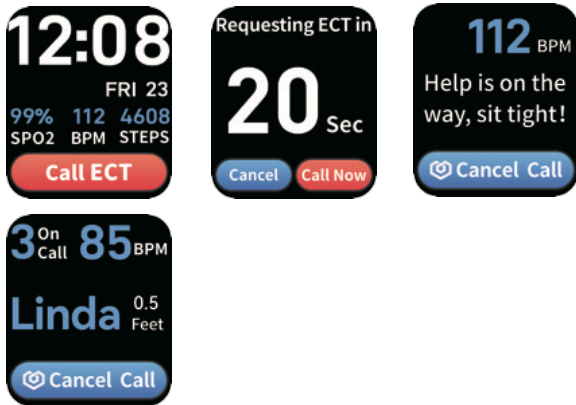

\* : The ECT team has to be preconfigured in “CoCo” App.

## 07. Other functions

Find watch, 12/24h time system, sedentary reminder, low battery reminder, incoming call reminder, online dial/custom dial, unit setting, turning the wrist to brighten the screen, female menstrual period reminder, goal achievement reminder.

## 08. Charging

Attach the charging cable to the CoCo BT2-Z charging port, ensuring that the metal pins are fully connected. Please use a USB adapter with a 5V output and at least 0.5A current rating or higher.

Note: If the CoCo BT2-Z cannot be powered on after being idle for a long time, clean the charging metal pins to improve the connection.

## 09. Fall Detection

By default, fall detection is disabled. You can enable it in the “CoCo” app on your smartphone.



When a fall is detected by your CoCo BT2-Z, it goes into a 20-second ECT countdown. During the countdown period, you can click “Call Now” to start ECT immediately. Otherwise, at the end of the countdown, an ECT call will be sent to your care team automatically.

## 10. FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: This device may not cause harmful interference, and This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

### **RF Warning Statement**

This device has been evaluated to meet the general RF exposure requirements. The device can be used in a portable exposure condition without restriction.