

CoCo

Smart Watch BT2-X

Your Constant Companion



*Please refer to this manual
before using the product.V1.0*

Need Help?

Email:

support@semcorel.com

Phone:

+1-(669)221-5768

Monday-Friday, 9:00AM-5:00PMPST

01 How to wear

Please wear the device correctly on your wrist, about half an inch or a finger width from your wrist bone, and adjust it to a comfortable position. The following pictures are for reference.


Tip: When monitoring your heart rate, wear your device more snugly.





02 How to download & connect to "CoCo" App

a. Press and hold the Rotary button to turn on your CoCo BT2-X, then scroll down from the wallpaper and go to Settings -> About ->


Download QR Code". Scan the QR code displayed on the watch to download and install the "CoCo" App on your smartphone. Alternatively, you can scan the QR code below to download and install the "CoCo" App.

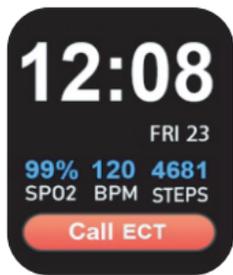




b. Open the "CoCo" App on your phone, and sign up for a CoCo ID.

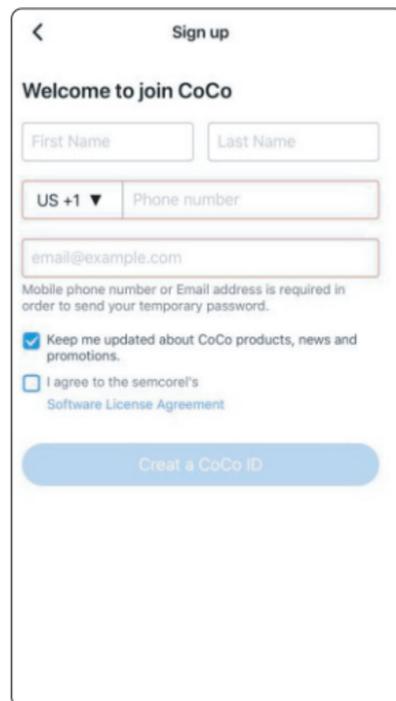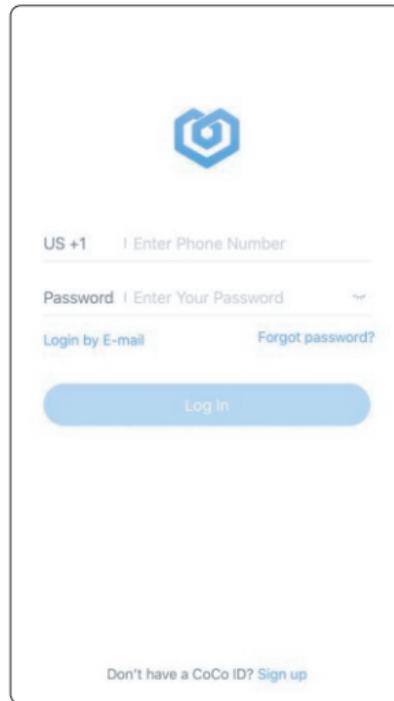


Then, log in and click on "Settings".
(The Settings button is at the lower right of the initial app display shown below.)

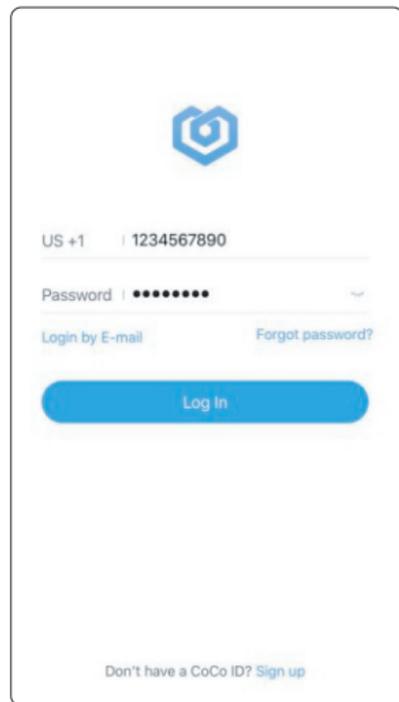


On the "Add Device" page, select "CoCo BT2" and click the "Connect" button.

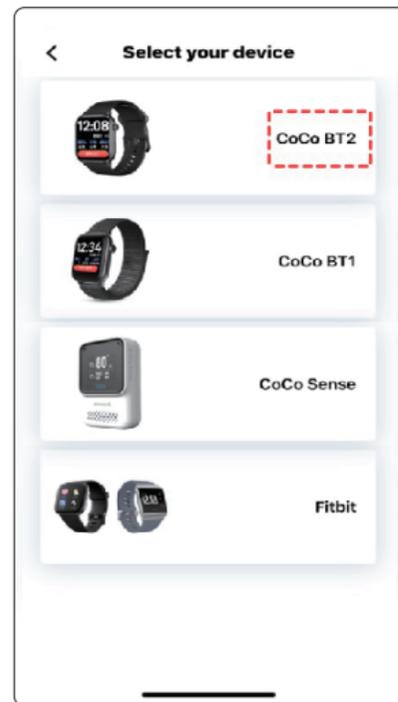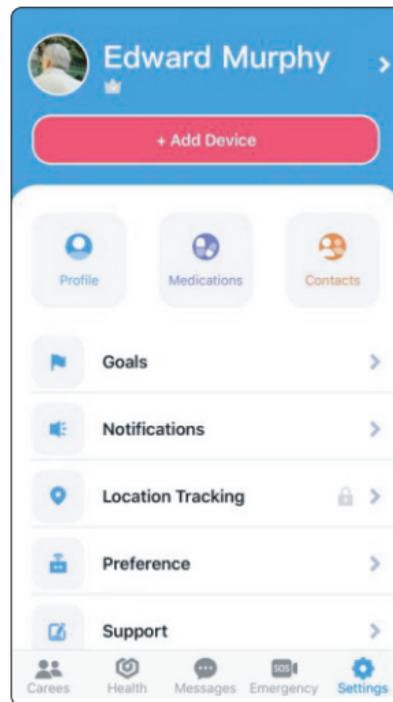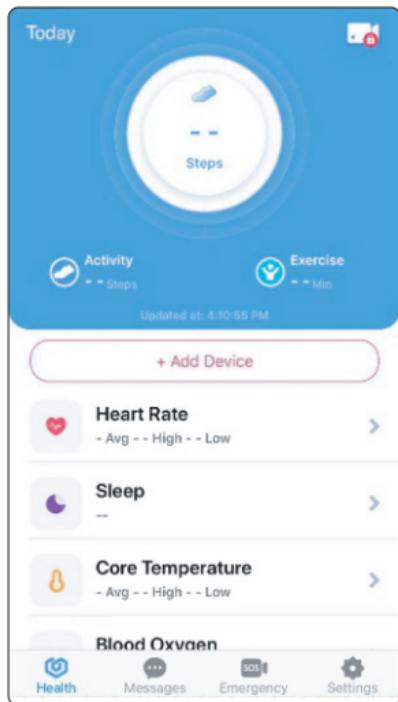

The connection screen will look as follows, and when finished, should return to the first screen with the connected device displayed.

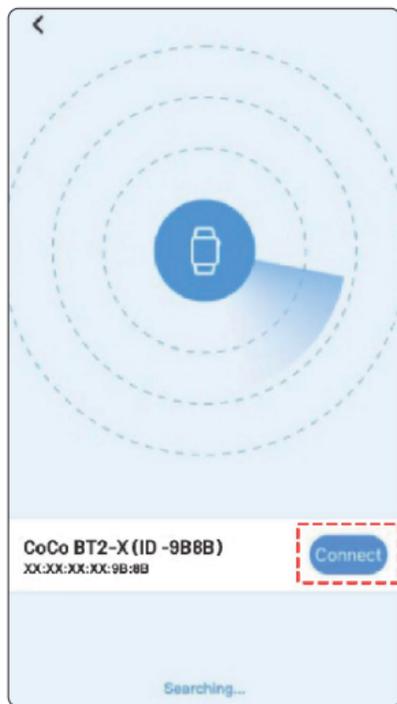

6

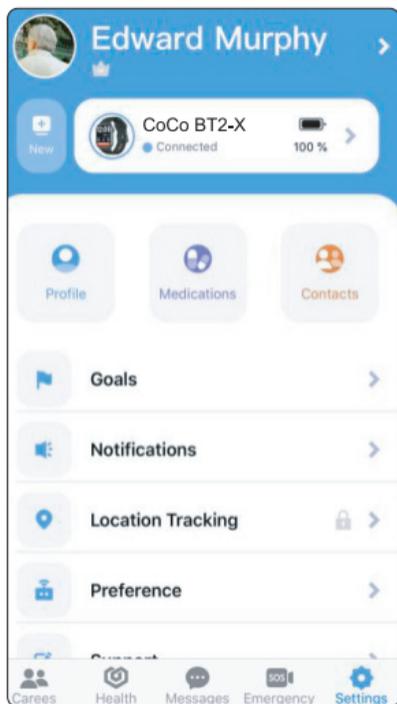

03. How to connect to BT call feature

- a. For Android phones and iOS phones (iOS 13.0 or above), after CoCo BT2-X is connected to the “CoCo” App, a 'PAIR' reminder pop-up will appear.
- b. For other phones, after CoCo BT2-X is connected to the “CoCo” App, you need to manually go to settings, search for the audio Bluetooth name 'CoCo BT2-X (ID-xxxx)', and click to pair the audio Bluetooth 'CoCo BT2-X (ID-xxxx)'.



7

Tips:

1). For a better experience, please always make sure to upgrade the "CoCo" App to the newest version.

2). Make sure your phone's system version is Android 5.0 or IOS 9.0 or above.

3). When connecting for the first time with iPhone, a "Pair" request will pop up. Only click "Pair" and enable the feature in the notification menu to have incoming calls and instant messages pushed.



4). When connecting for the first time with Android, a "Permissions" request will pop up. Please follow the instructions and allow all permissions to ensure all functions work properly.

5). To connect successfully, please turn on your phone's Bluetooth, GPS, and WiFi.


6). If your CoCo BT2-X cannot be searched or connected to the "CoCo" App, please turn off or reset your CoCo BT2-X and try again.

04 Operating Instructions

a. Shortcut settings interface: Swipe down from the main screen (below left) to go to the shortcut settings page (right)

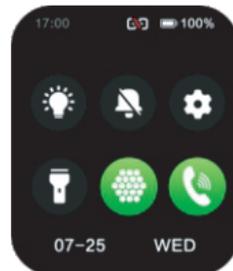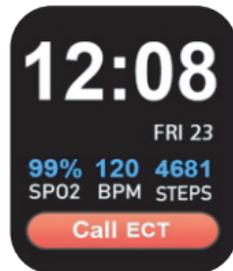

b. Message notification: Swipe up from the main screen to check your received messages.

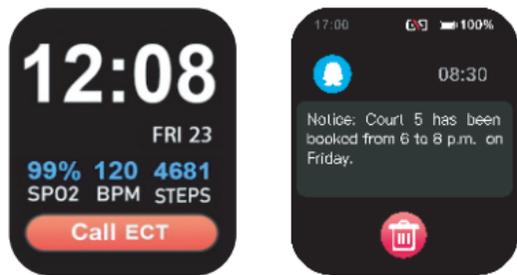


c. To open menus, swipe right to enter the themed list interface.

There are three menu styles available. You can switch between these styles (list, nine-square grid, and honeycomb) in the Settings->Theme menu.



d. To open the status shortcut interface: swipe left from the main screen.

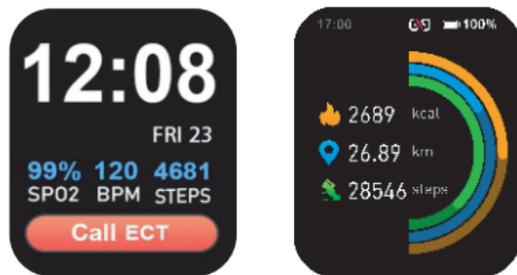

e. For quick access to changing the watch face, press and hold on the main screen for 3 seconds to select the watch display style. Swipe left and

right to switch between watch display styles.



- f. To power on/off the CoCo BT2-X, press and hold the Rotary button for 3 seconds
To power off, a confirmation window will appear, click green mark to confirm, red "x" to cancel.





- g. During operation, press the Rotary button to return to the previous page. When on the main page, you can press the side button to turn the screen on/off.

- h. Rotary button function: You can rotate the button by sliding up and down to switch the list theme on the main screen. On other pages, rotate the button to scroll through the menu. On the honeycomb theme page, rotate the button to zoom in or out.

- i. Side long button functions:
1) Hold for 3 seconds to initiate an ECT call
2) One tap to access the sports list.

05 Function of Activities

	<p>Training Support 100+ sports modes: walking, outdoor running, cycling, skipping, badminton, etc. More detailed information analysis and data records can be viewed in the “CoCo” App on your smartphone.</p>
	<p>Status: Record the number of steps, distance, and calories for the day. More detailed analysis and records can be viewed in the “CoCo” App on your smartphone.</p>

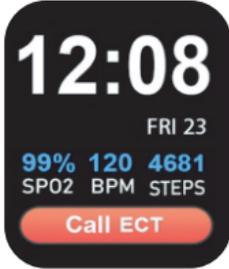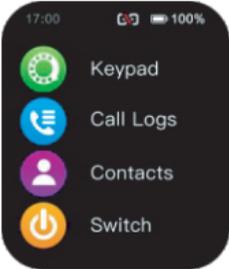	<p>Call ECT <i>(Emergency Care Team):</i> Note: To call ECT, you need to add your ECT members through the CoCo app first. Press and hold the crown button for 3 seconds or long press "Call ECT" button on watch face to start a Call ECT call</p>
	<p>Phone: Keypad: You can input a phone number to make a phone call. Call logs: Logs synced from your phone Contacts: Contacts synced from your phone BT Switch: Bluetooth switch for Phone call and Media Control.</p>




Heart Rate Measurement

Your CoCo BT2-X monitors heart rate continuously when worn properly.

To check heart rate manually:

- 1 Navigate to Heart Rate on the watch
- 2 Stay still for accurate reading
- 3 View result in BPM


Note:This value is not for medical diagnosis.

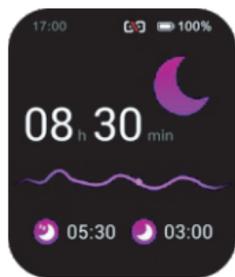

Sleep Monitoring

Your CoCo BT2-X automatically tracks sleep patterns when worn overnight.

- Tracks total sleep time and quality
- Monitors deep sleep, light sleep, and wake periods
- Data syncs automatically to the CoCo app

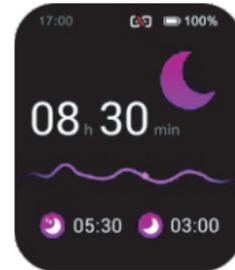

throughout the night. This feature allows you to track your sleep patterns and improve your sleep quality over time.



Blood Oxygen Monitoring


Your CoCo BT2-X measures blood oxygen saturation(SpO2) levels continuously.

To check blood oxygen manually:

- 1 Navigate to Blood Oxygen on the watch
- 2 Stay still during measurement
- 3 View result as percentage

For best results: Keep arm steady and watch snug against skin.

Note:This value is not for medical diagnosis.

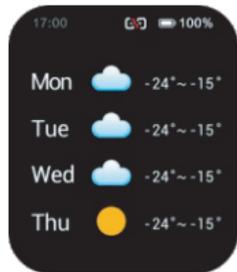

Weather:


Shows the weather forecast for the current day, and the next 4 days.

The weather forecast information is updated from the “CoCo” App on your smartphone.



Music control:


After connecting to the “CoCo” App, the CoCo BT2-X can be used to control music playback from your smartphone, including play/pause, previous song/next song, and volume.

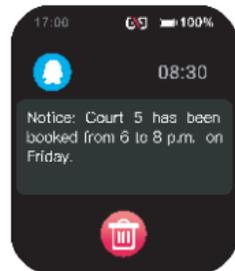

Information reminder:


the CoCo BT2-X can synchronize notifications from your smartphone, and display the last eight messages.

Note: You need to grant the CoCo app notification permission to have this feature.

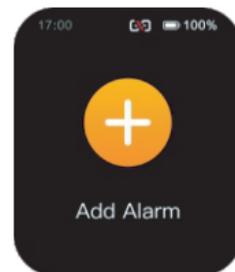

Alarm clock:

You can sync the alarm clock settings with the “CoCo” App. turn on or off the alarm clock setting, and set up to 8 alarm times.

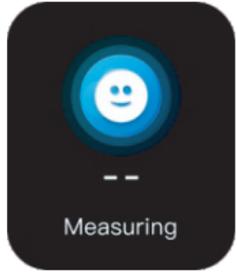


Emotions:

Test your current mood. The “CoCo” App can record and display your emotional state 24 hours a day.
(The results are for reference only and should not be used for medical diagnosis.)




Pressure:

24 hours Monitor pressure conditions, record data and display scientific analysis charts, and auto-automatic monitoring can be turned on in “CoCo” App.
(The display is for reference only and should not be used for medical diagnosis.)

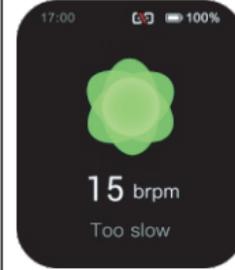

Respiration Rate:

Measures the rate of breaths per minute.
(The display is for reference only and should not be used for medical diagnosis.)

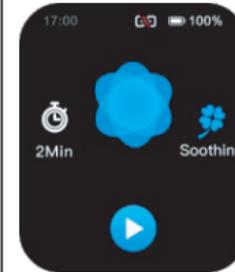

Breathing training:

You can set the rhythm and duration of the breathing exercises, and then follow the prompts to complete the training.




Games:

Example games include, Numbers Klotski




AI voice assistant:

Press the AI voice function button and say the wake-up words to activate the CoCo voice assistant.

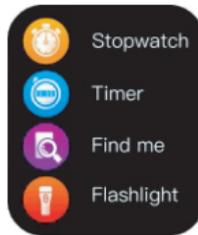

Other functions:

Stopwatch/ Timer/ Find phone/ Flashlight.

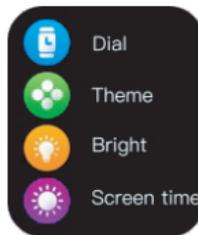


Setting:

Dial/ Theme/ Bright/ Screen time/ Sounds/ IPS/ Reset/ Info/ QR Code/ Password (Not all settings shown.)

06 Emergency Help


Press the side button for 3 seconds to trigger calling ECT (Emergency Care Team), or click the “Call ECT” icon from BT2-X main screen.

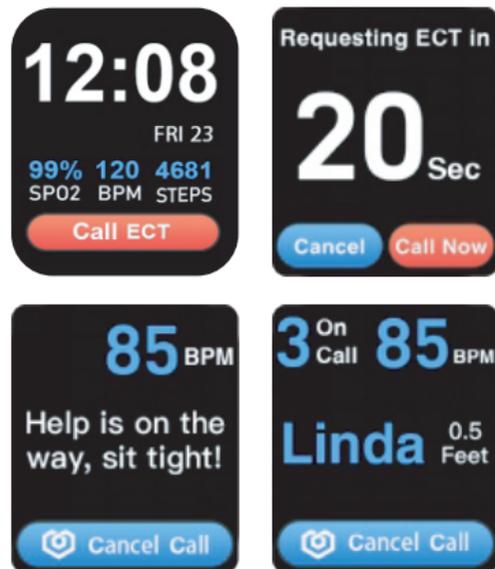

*: The ECT team has to be preconfigured in “CoCo” App.

07 Fall Detection

When a fall is detected by CoCo BT2-X, it goes into ECT countdown for 20 seconds. During the countdown period, you can click "Call Now" to start ECT immediately, or an ECT call will be sent to your care team automatically at the end of the countdown.

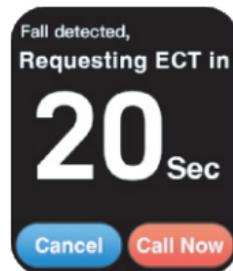

By default, fall detection is disabled. You can enable it in the “CoCo” App on your smart phone.

08 Other functions

Find watch, 12/24h time system, sedentary reminder, low battery reminder, incoming call reminder, online dial/custom dial, unit setting, turning the wrist to brighten the screen, female menstrual period reminder, goal achievement reminder.

09 Charging

Attach the charging cable to the CoCo BT2-X charging port, ensuring that the metal pins are fully connected.
Please use a USB adapter with a 5V output and at least 0.5A current rating or higher.

Note: If the CoCo BT2-X cannot be powered on after being idle for a long time, clean the charging

contacts and try it again.

10 FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to these conditions:

- 1 This device may not cause harmful interference
- 2 This device must accept any interference received including interference that may cause undesired operation

Warning: Unauthorized changes or modifications may void your authority to operate this equipment.

Note: This equipment has been tested and complies with Class B digital device limits under Part 15 of the FCC Rules. These limits provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used according to instructions, it may cause harmful interference to radio communications.

However, interference may still occur in particular installations.

If this device causes interference to radio or TV reception

(determined by turning the device off and on), try:

- Reorienting or relocating the receiving antenna
- Increasing separation between the equipment and receiver
- Connecting to a different circuit outlet
- Consulting the dealer or an experienced technician

RF Exposure Statement

This device meets general RF exposure requirements and can be used in portable exposure conditions without restriction.

11 Warranty

Coverage: CoCo BT2-X comes with a one-year warranty for defects; battery and charging cable have six months warranty.

Exclusions - Not covered:

- 1 Self-assembly or disassembly attempts
- 2 Drop damage
- 3 Human error or third-party damage(water damage, external force, breakage, scratches during use)

For warranty service: Contact authorized dealers directly.



Warranty certificate			
Client Info			
Product Type		Vendor	(stamp)
Client Name		Contact Info	
Vendor's Contact		Purchase Date	
Product IMEI Code			
Client's Address			
Warranty Record			
Date	Problems	Diagnosis	More Info